

Material Wizard

Material Profile Wizard

Enter the values, choose a name for the Material Profile then click [Create]

Material Family: ← Sets initial temp, fans, PreloadVE

Print Temperature [C]:

Bed Temperature [C]:

Filament Diameter [mm]:

Heated Chamber (affects fan)

In Extruder

- Ext1
- Ext2
- Ext3
- Ext4

Material Profile Name

From:
<http://kiss.rumble.si/> -

Permanent link:
http://kiss.rumble.si/doku.php?id=material_wizard_window

Last update: **2018/10/24 13:06**

